

Nexys Board

signal	dir	pin	signal	dir	pin	signal	pin	dir	signal	dir	pin
MCLK	in	A8	SW0	in	N15	LD0	L14	out	CA	out	F13
AN0	out	G14	SW1	in	J16	LD1	L13	out	CB	out	E13
AN1	out	G12	SW2	in	K16	LD2	M14	out	CC	out	G15
AN2	out	G13	SW3	in	K15	LD3	L12	out	CD	out	H13
AN3	out	F12	SW4	in	L15	LD4	N14	out	CE	out	J14
BTN0	in	J13	SW5	in	M16	LD5	M13	out	CF	out	E14
BTN1	in	K14	SW6	in	M15	LD6	P14	out	CG	out	G16
BTN2	in	K13	SW7	in	N16	LD7	R16	out	CDP	out	H14
BTN3	in	K12									